



## OPERATING INSTRUCTIONS

### Pratika Semi Automatic

1. Fill tank (14) with clean water through plastic filter, taking care not to spill any water into boiler housing.
2. Plug electric lead (13) into suitable power supply and switch on socket outlet.
3. Check that the drain valve (12) is closed.
4. Switch on boiler and iron switches (3 & 4)
5. Press and hold down pump switch (1) until water level can be seen through the gauge glass.
6. Adjust thermostat on iron to desired setting.
7. Wait for pressure to build up and for indicator light (6) to come on. The boiler is now ready for use. The indicator light (6) will go on and off when the boiler is in use. This is normal and indicates that the heating element is working correctly.
8. For steam, press and hold down the lever micro switch on the iron (9). Steam volume can be adjusted by turning the volume control knob (10) clockwise or anticlockwise as desired.
9. When using the boiler, check the water level regularly and top up if necessary by pressing the pump switch (1).
10. It is advisable to drain the boiler regularly. Before doing so, ensure the boiler is switched off and that there is little or no pressure showing on the pressure gauge (7). Always open the drain valve (12) with caution.

### CAUTION!

**Never unscrew the safety/fill cap (11) when boiler is hot!**

**Never open the drain valve (12) when boiler is hot!**

